 





HLF808/909

INSTALAČNÍ NÁVOD / INSTALLATION INSTRUCTION


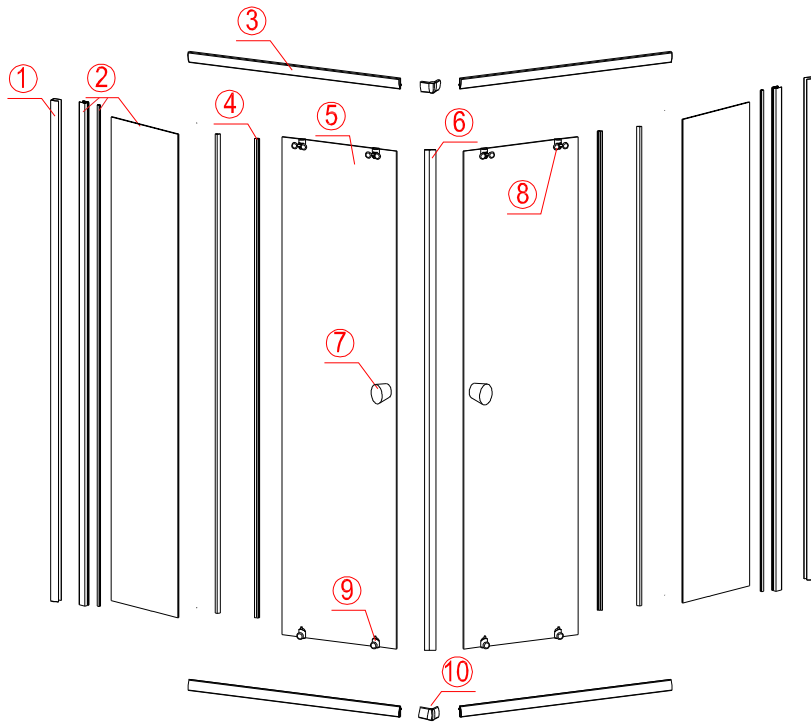


① x 2	② x 2	③ x 4	④ x 4
⑦ x 2	⑧ x 4	⑨ x 4	⑩ x 2
x 12 ST3.5x9.5	x 6 ST4.2x32	x 6 Ø6x30	x 8 ST3.5x32
⑤ x 2	⑥ x 2	x 4	x 8

  
 
1

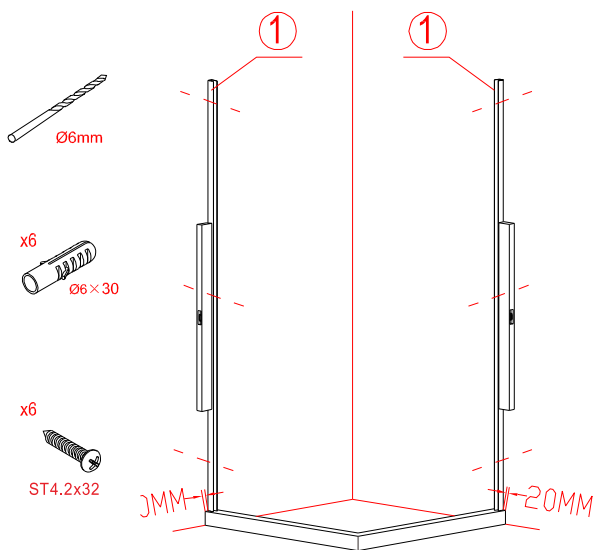




2

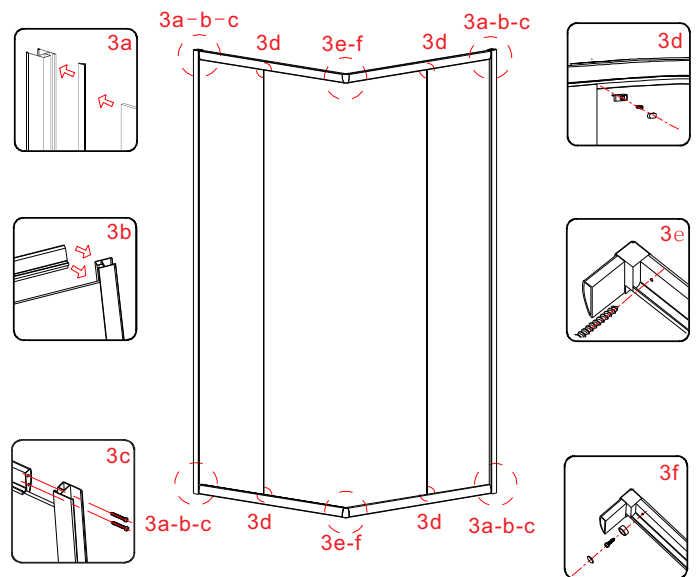  




3

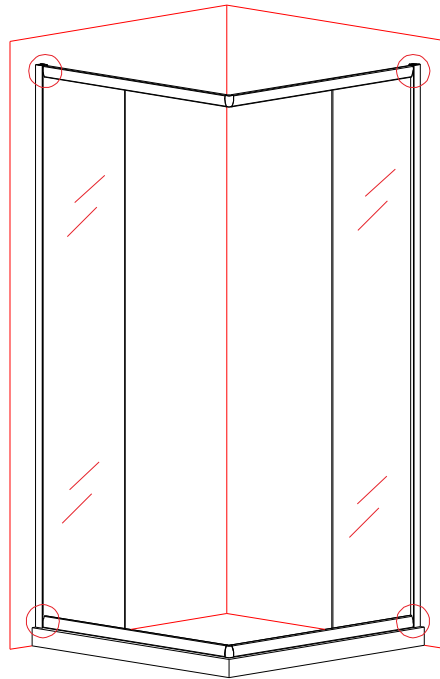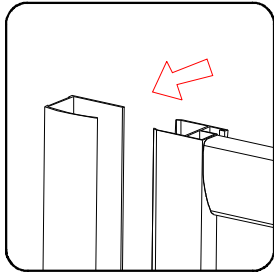  








4

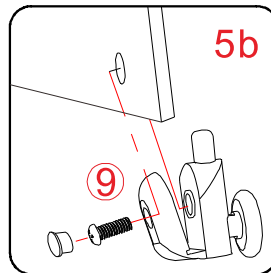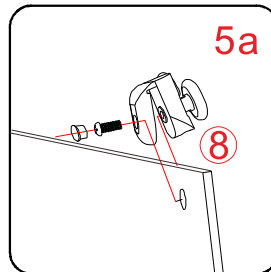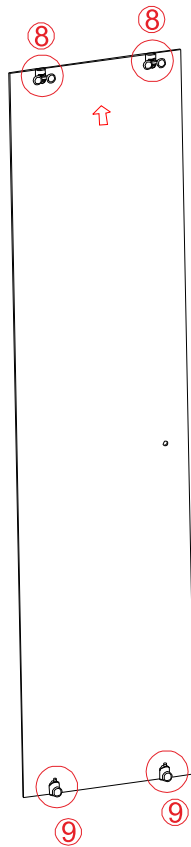   




5

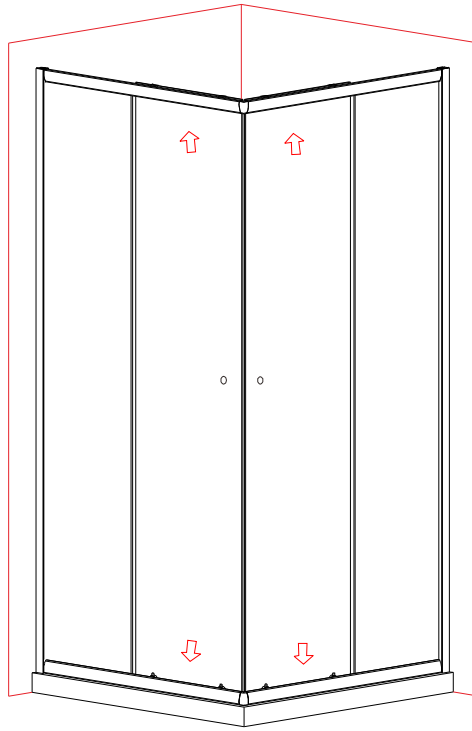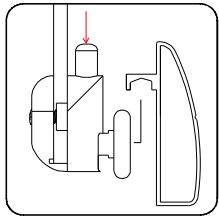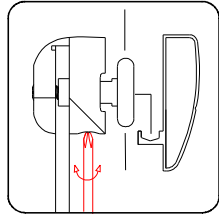   


6

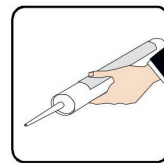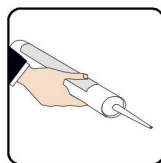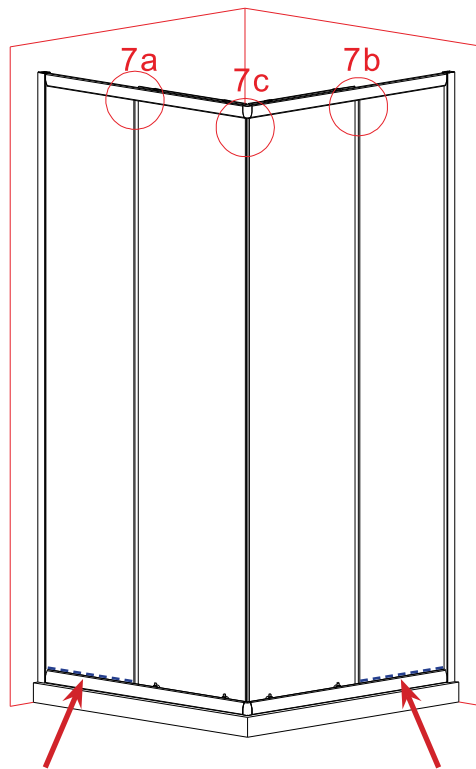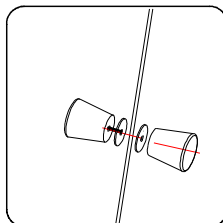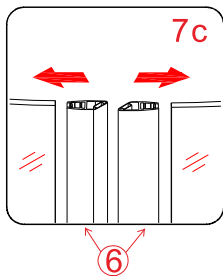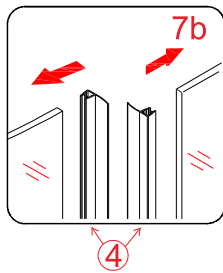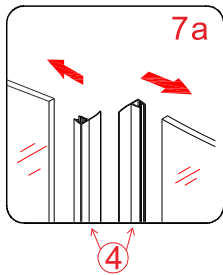       

7

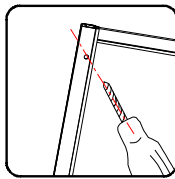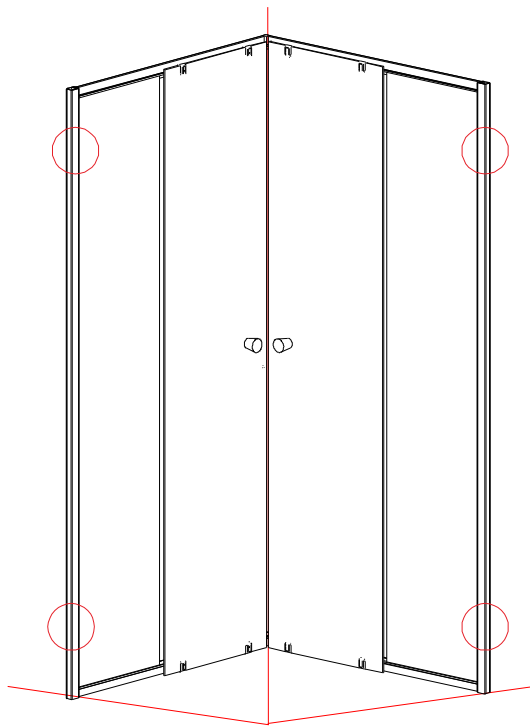   

Ø 2.8mm

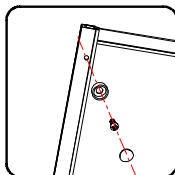 

x 4









ST3.5x9.5


x 4



      8

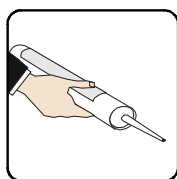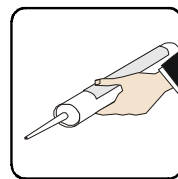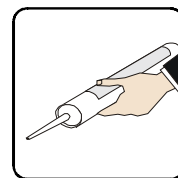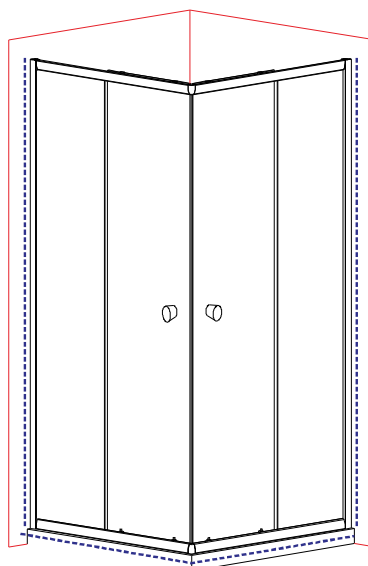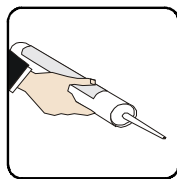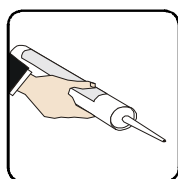

24 hodin

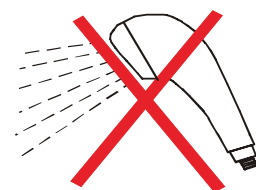 

9