




Návod na instalaci pantových sprchových dveří FONTE


- A) 2102-01/80 instalační rozměry 798-802mm
- B) 2102-01/90 instalační rozměry 898-902mm

Pakoměřice 87
250 65 Líbeznice u Prahy
www.sapho.cz


A



B

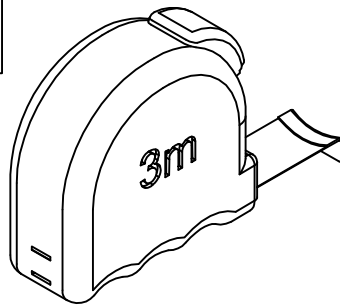


C

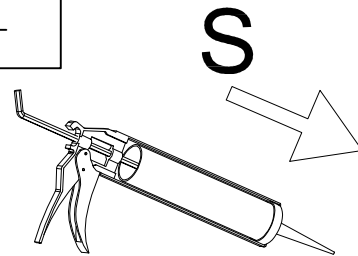


SILIKON

D

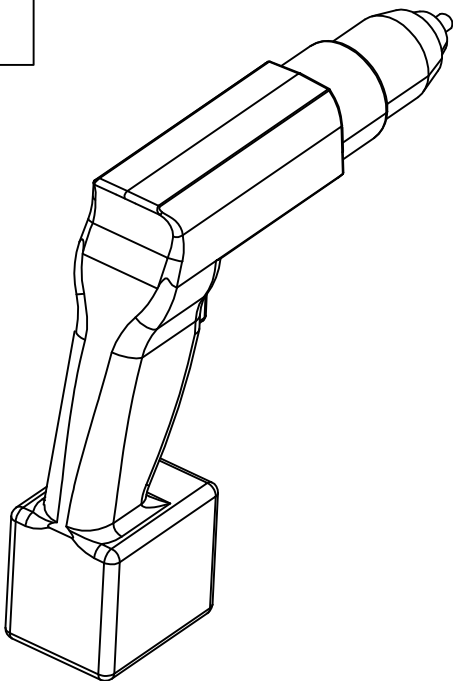


E

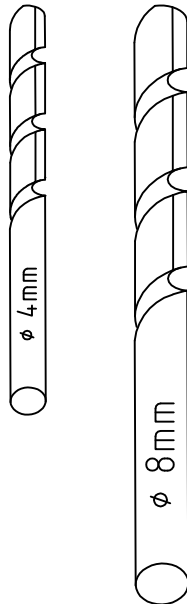


F



G

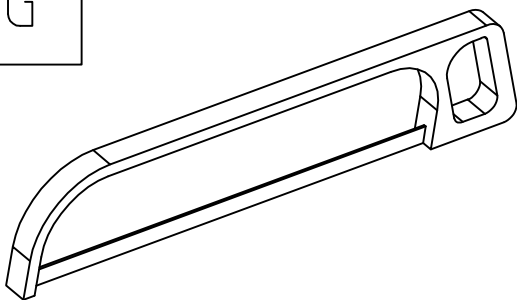


H



P1

1x2m




P2

2x2m




P3

1x1m

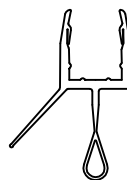

P4

1x2m




8mmx12mm

P5


1x1m




1

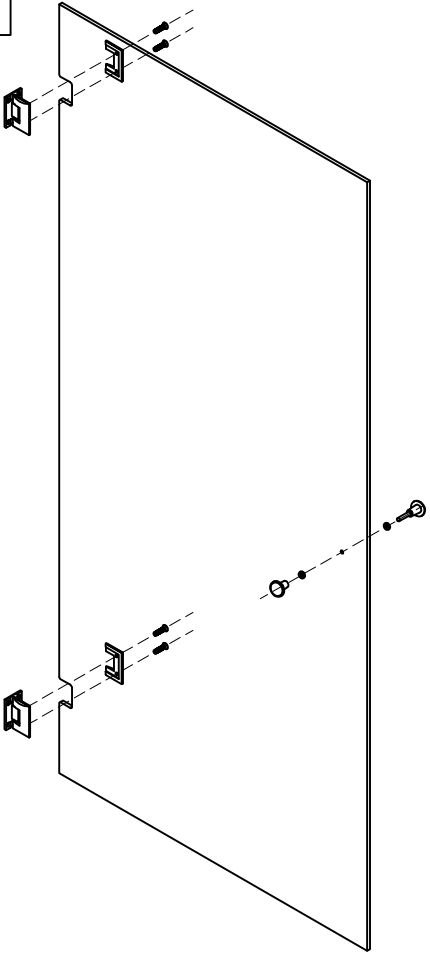


2

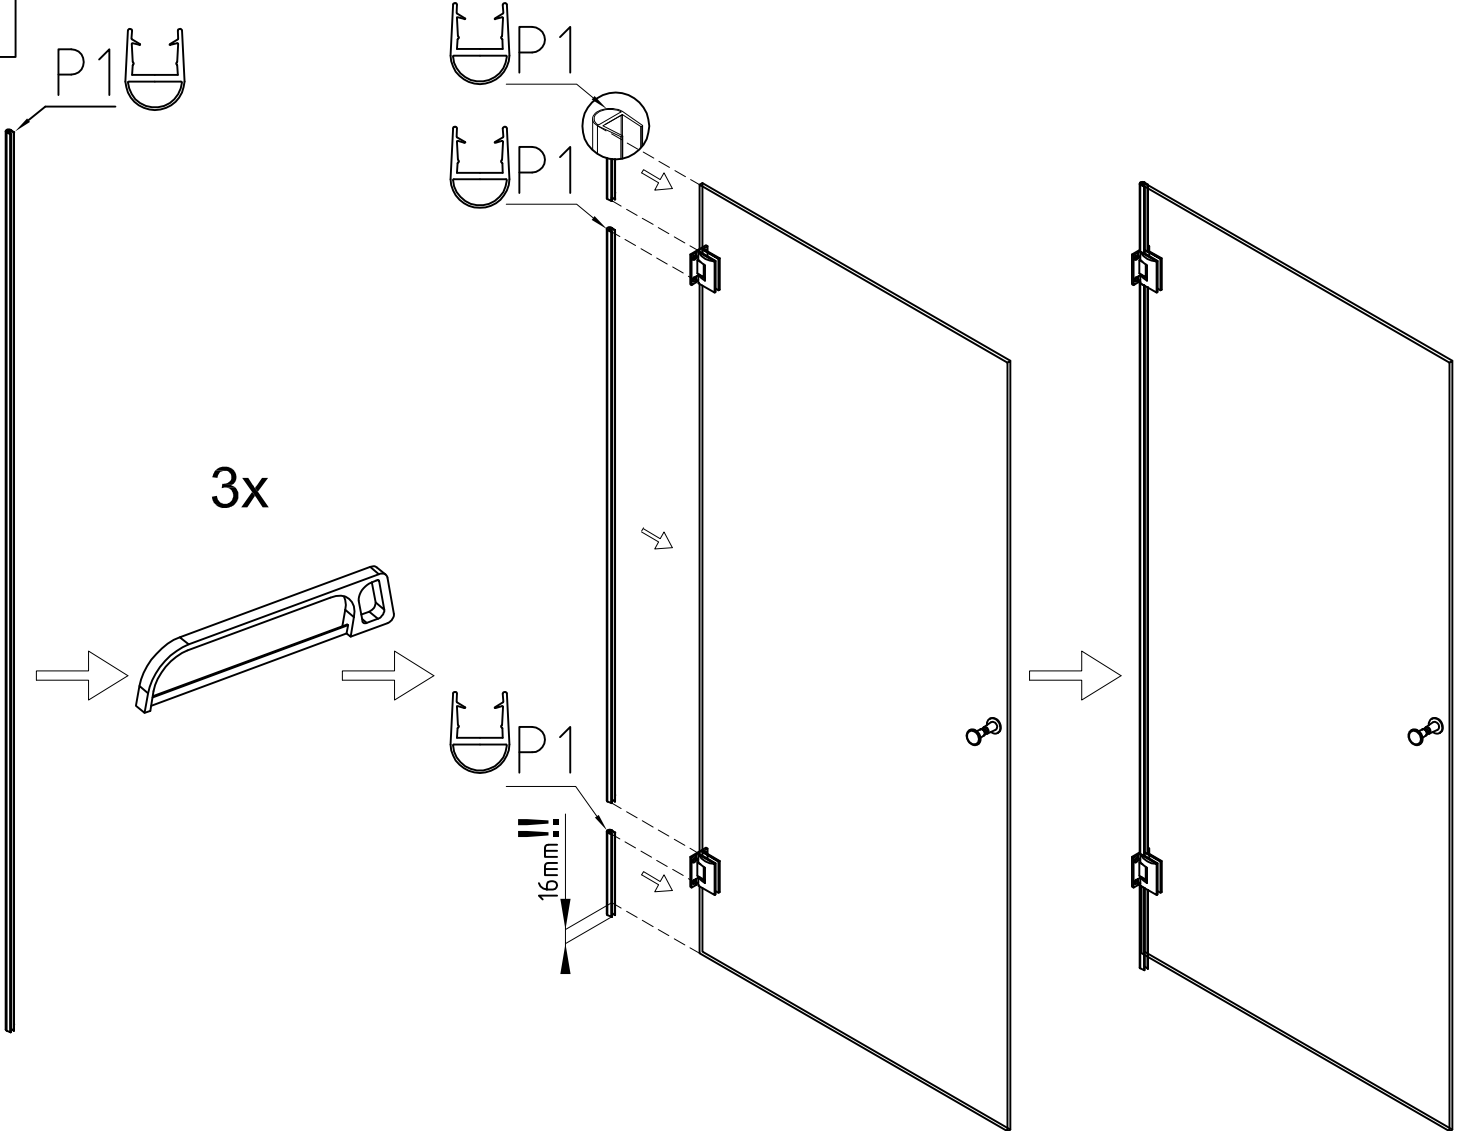


3

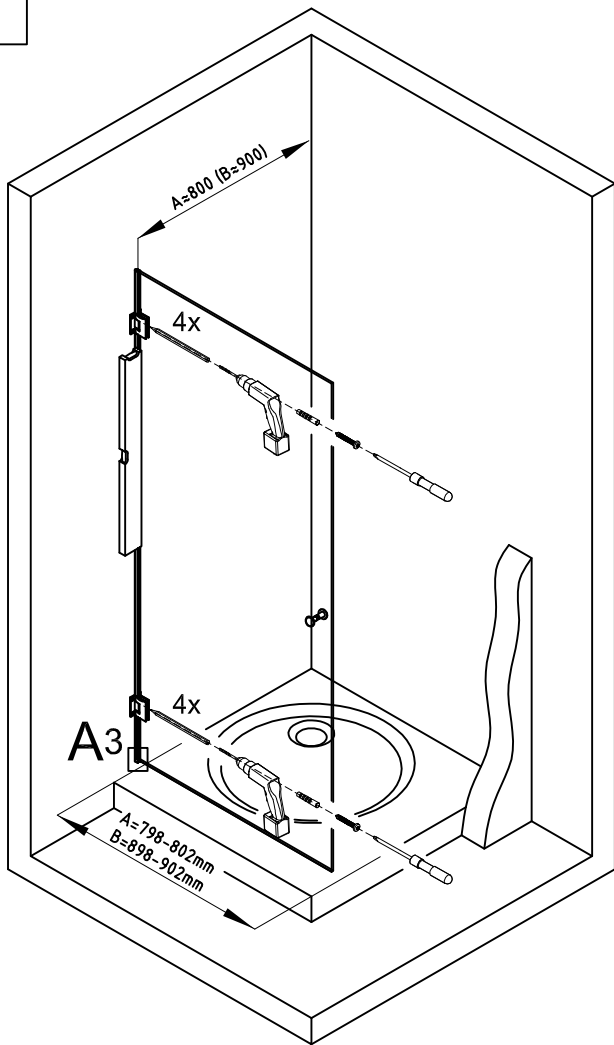

A3

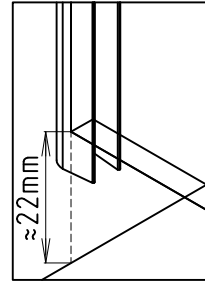


4

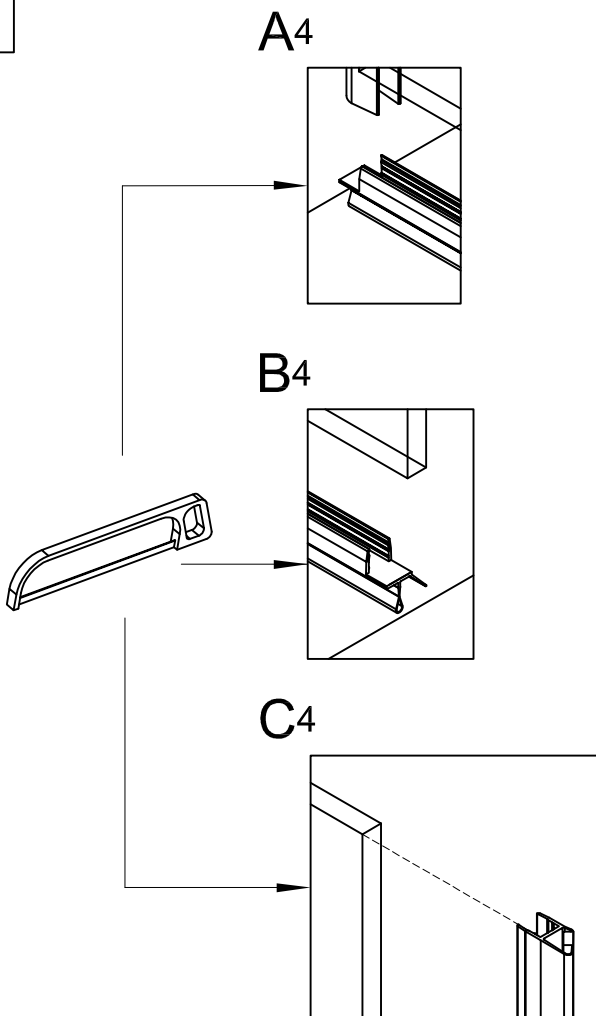

A4

B4

C4

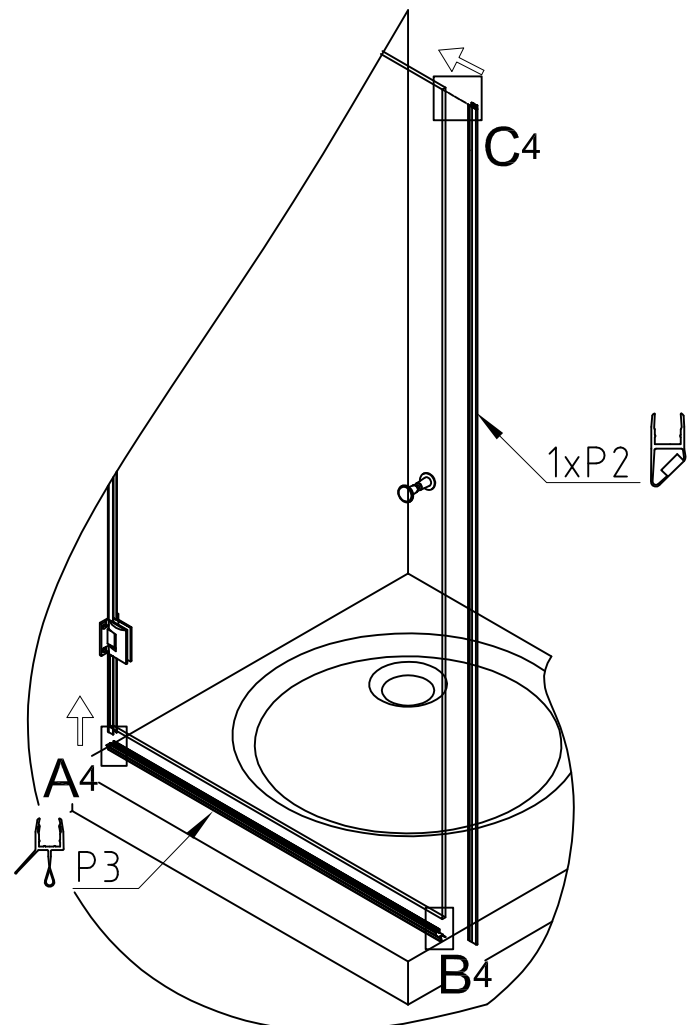

C4


1xP2

A4


P3

B4


5

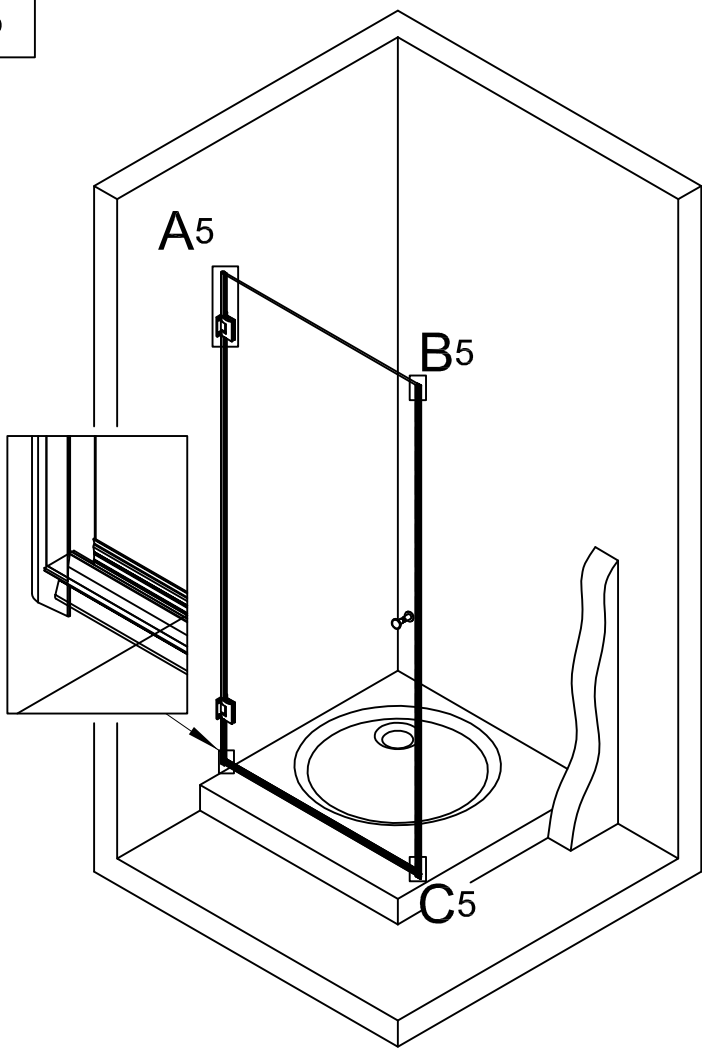


A5

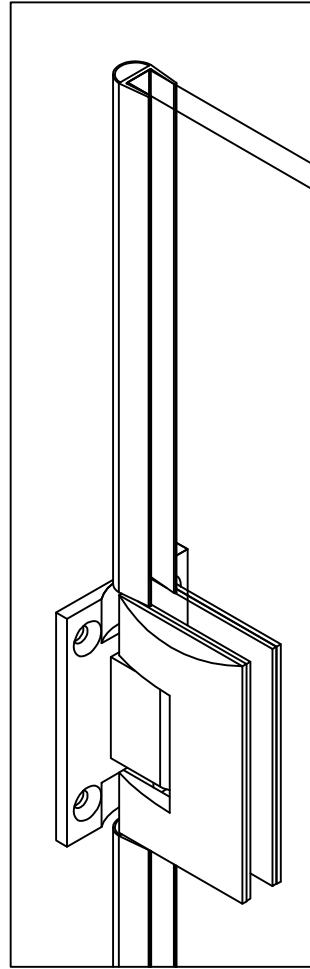






B5

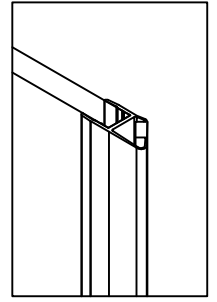


C5

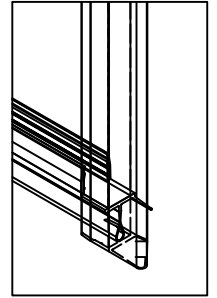


6

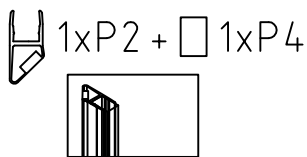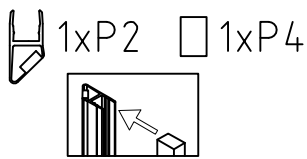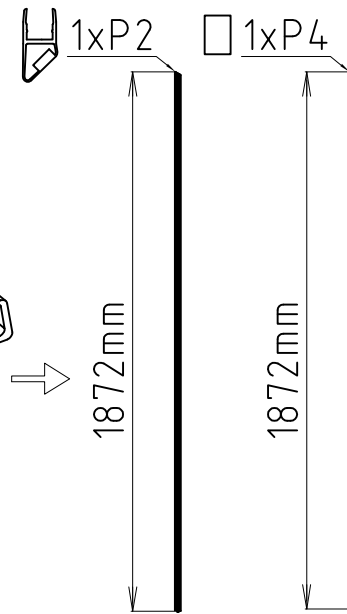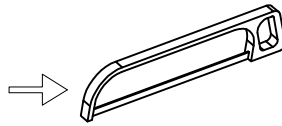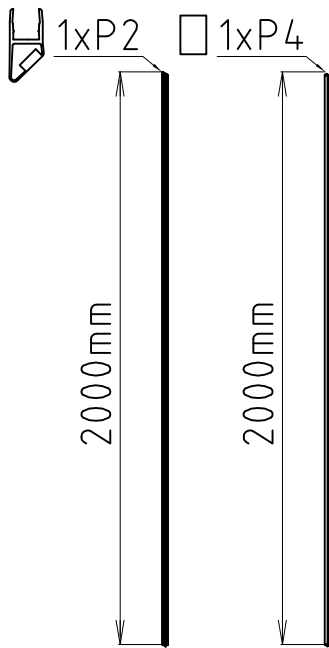

7

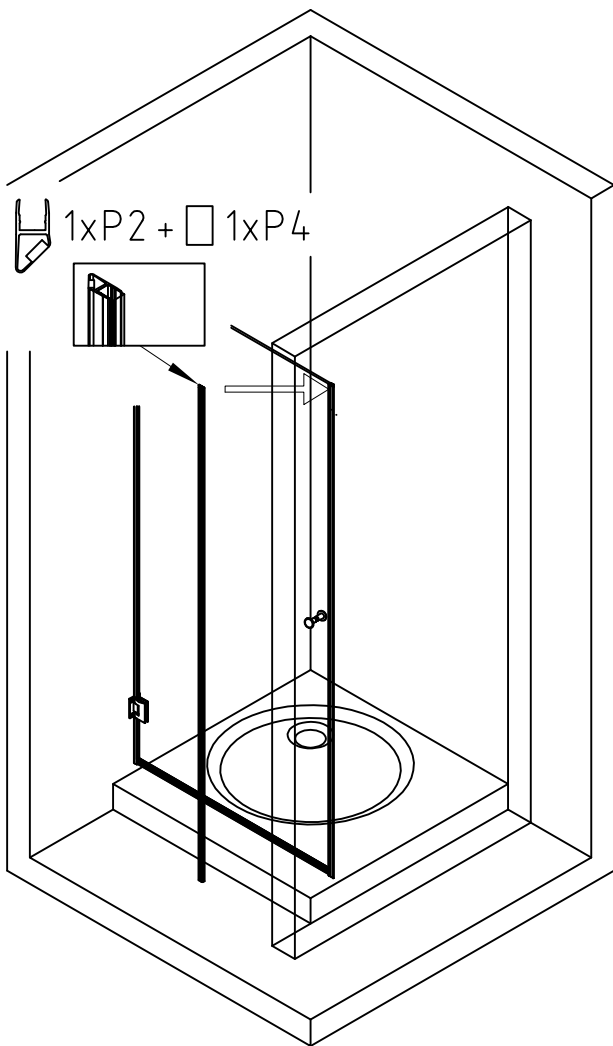


8

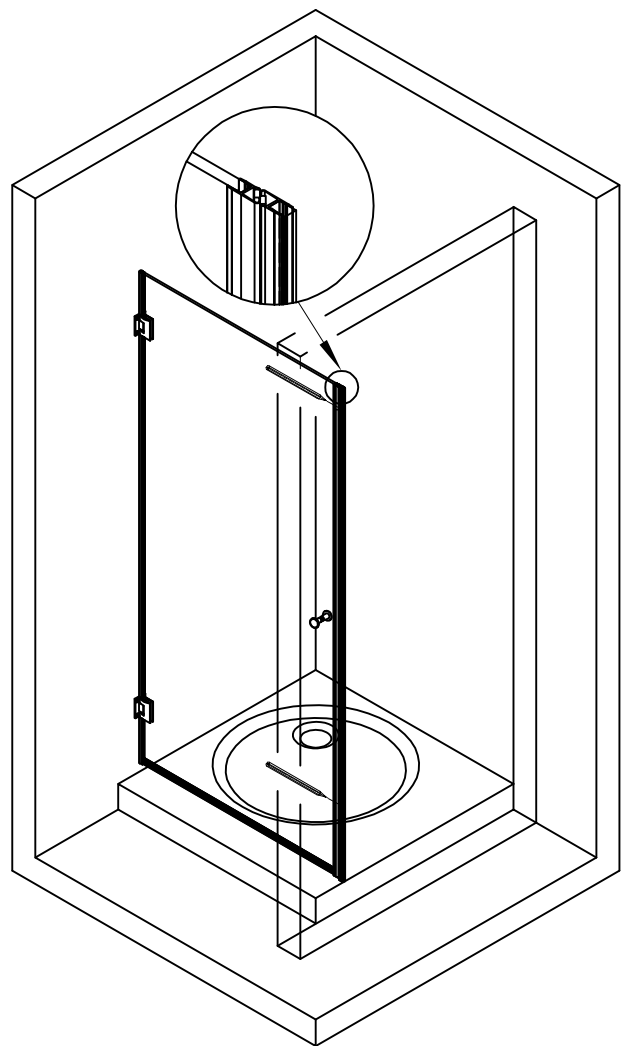


9


1. 1xP2 + 1xP4




2. 1xP2 1xP4




3. 1xP4

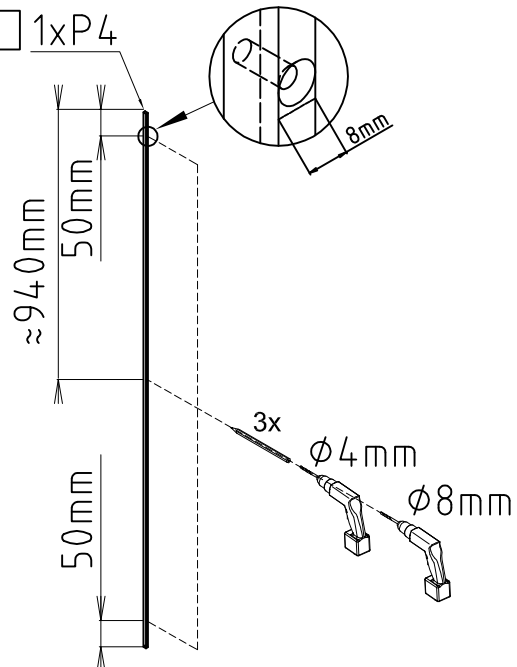

10

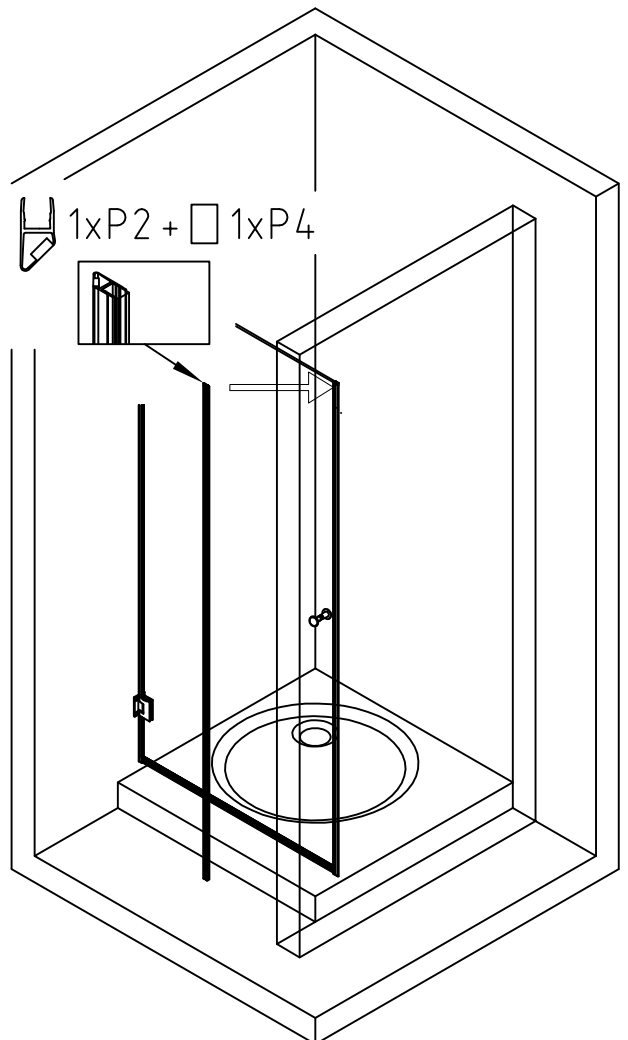

11

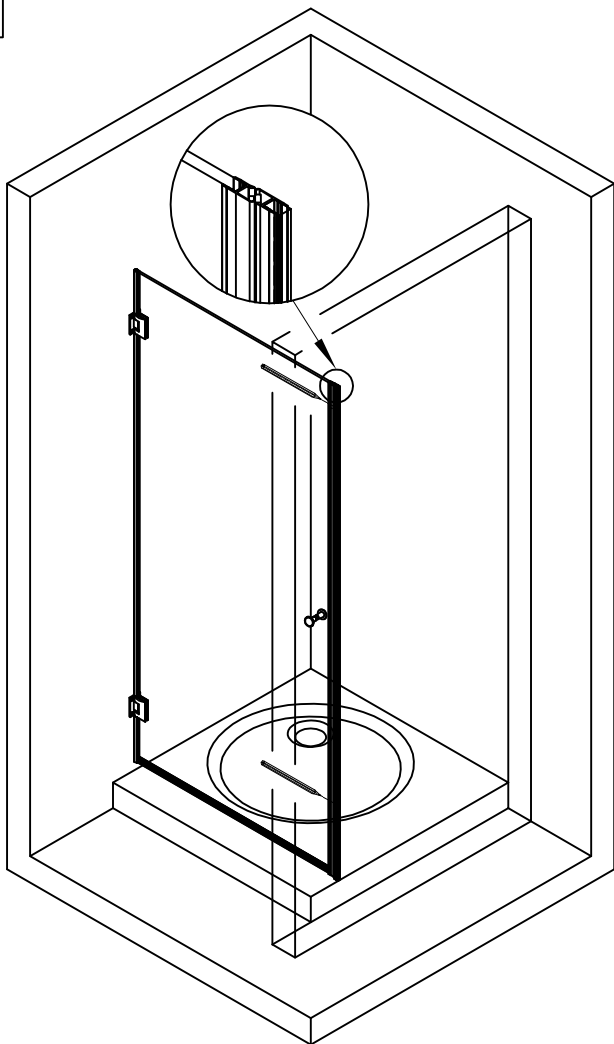

12


1xP2 + □ 1xP4




1xP2 □ 1xP4



□ 1xP4

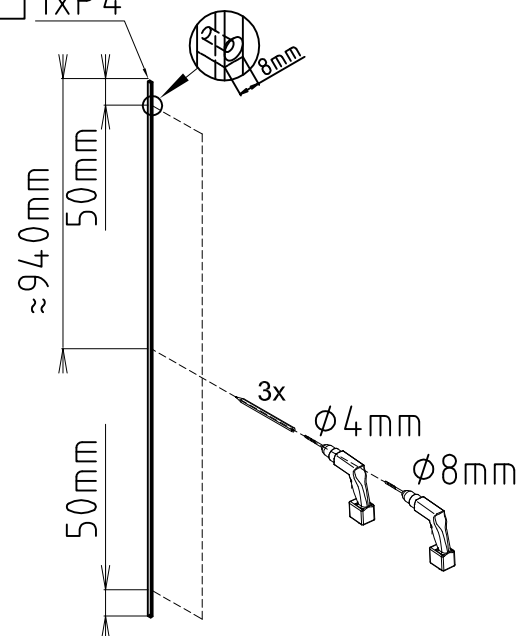


13

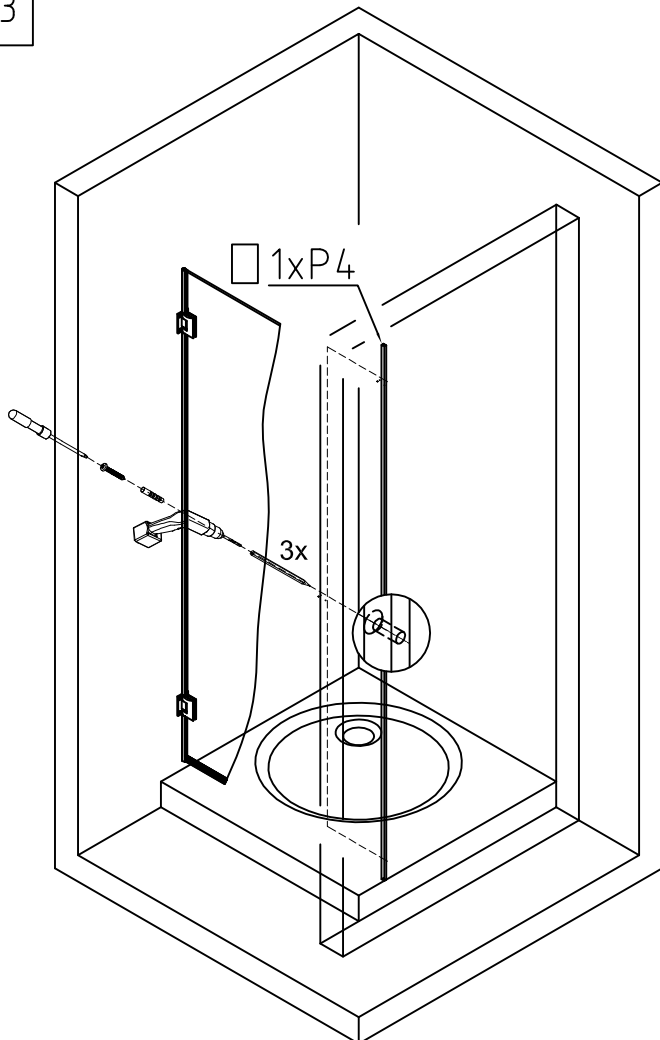

14


1xP2 □ 1xP4



1xP2 + □ 1xP4



15

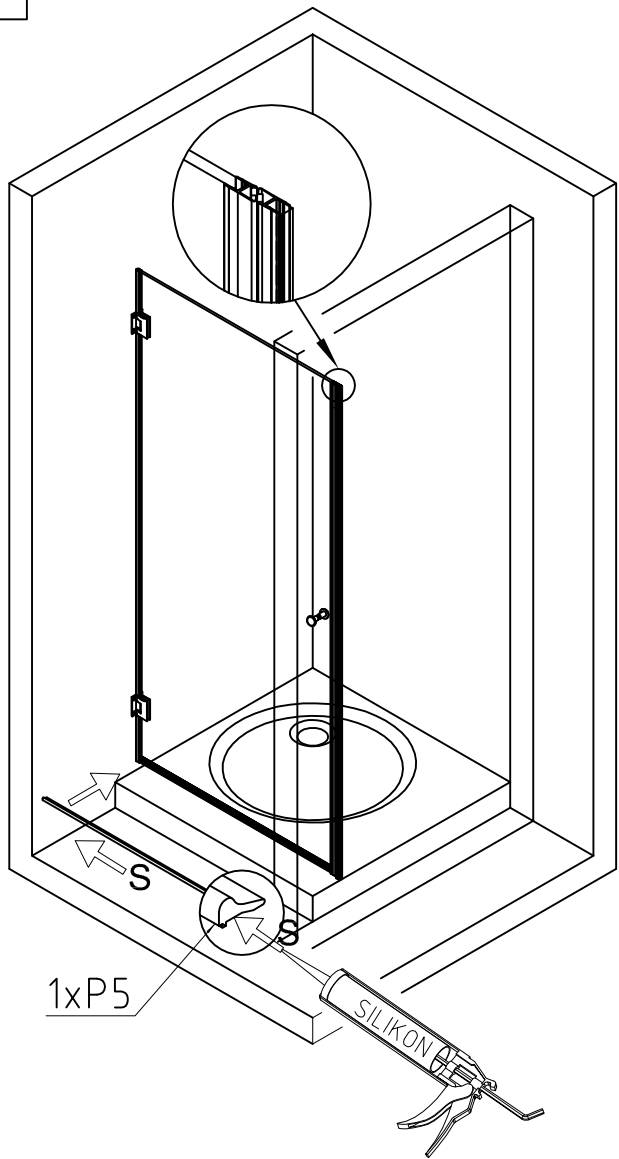

16

