


SIGMA SIMPLY

GS1279/GS3888, GS1296/GS3899

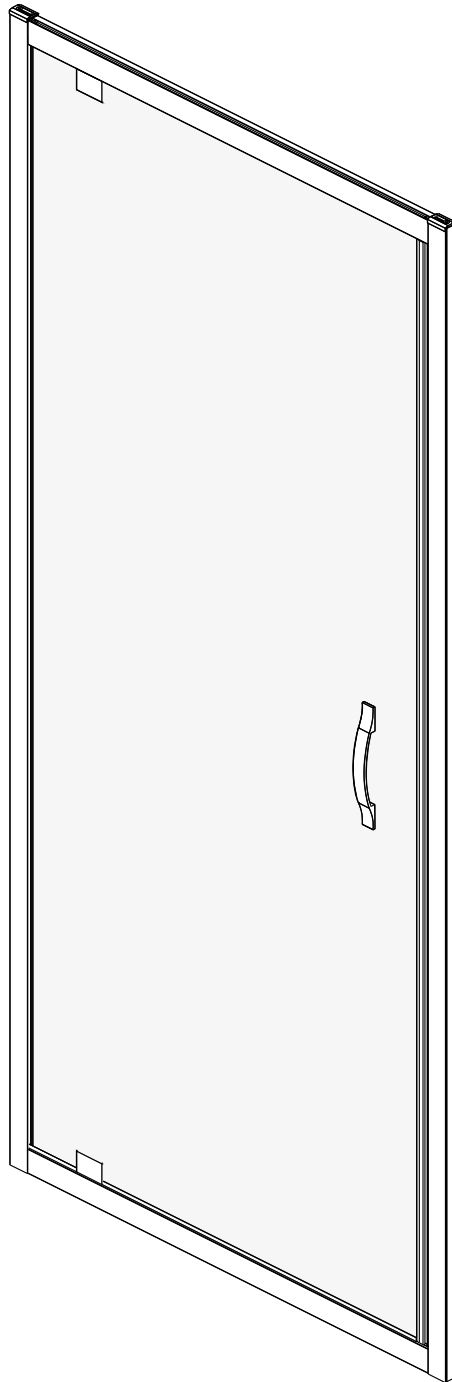





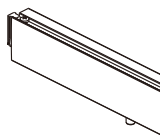






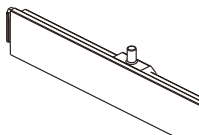




EN14428
Glass shower enclosure
cleaning efficiency: conforming
impact resistance: conforming
operating life: conforming

Skleněné sprchové zástěny
schopnost: vyhovuje
odolnost proti nárazu: vyhovuje
životnost: vyhovuje

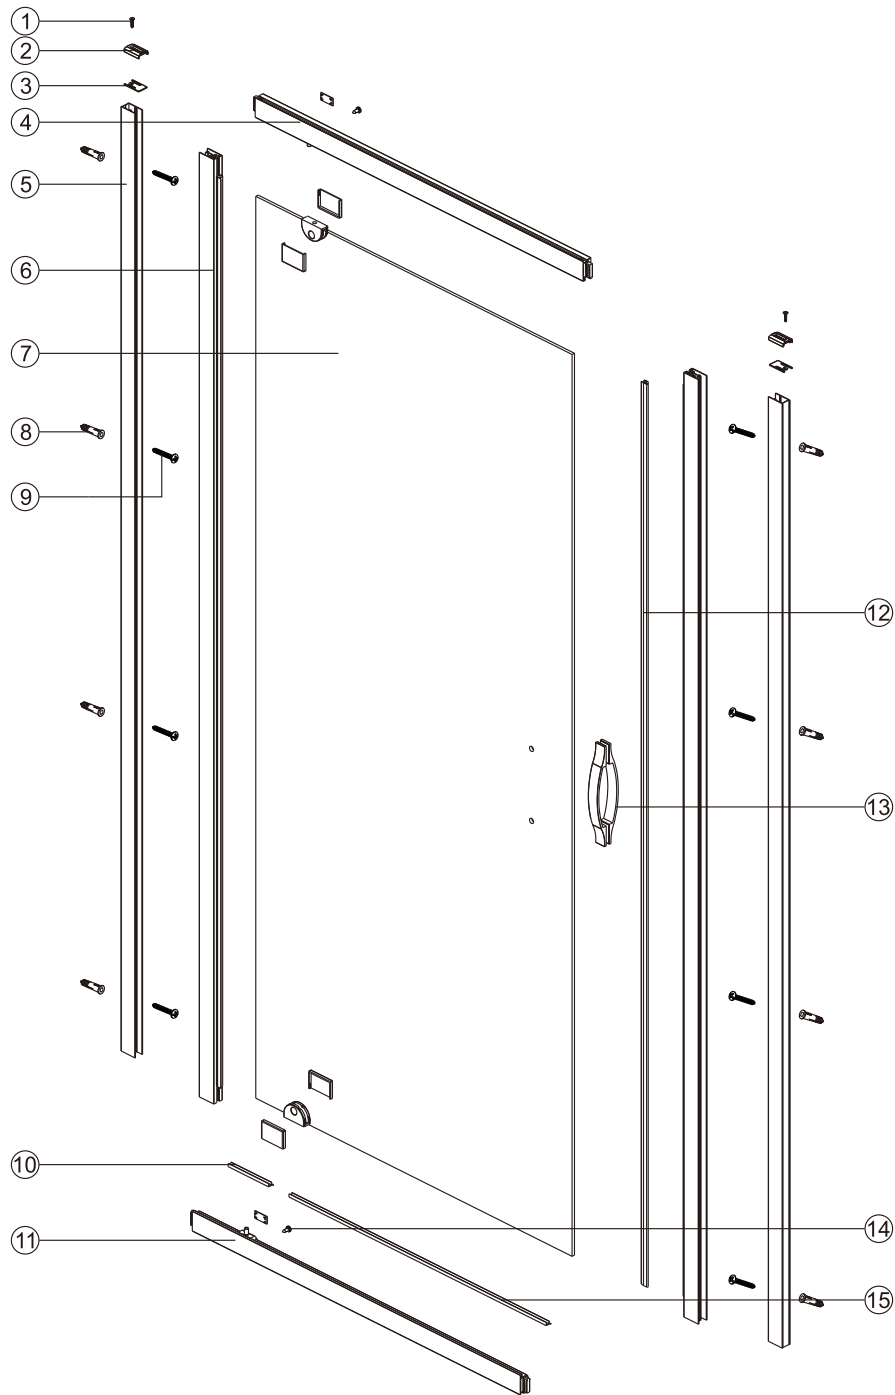
 **GELCO**

GELCO s.r.o., Makovského 1341, 163 000 Praha 6




1 X2  ST4X20	2 X2 	3 X2 	4 X1 	5 X2 
6 X2 	7 X1 	8 X8 	9 X8  ST4X40	10 X1 
11 X1 	12 X1 	13 X1 	14 X2  ST4X13	15 X1 

PREPARATION

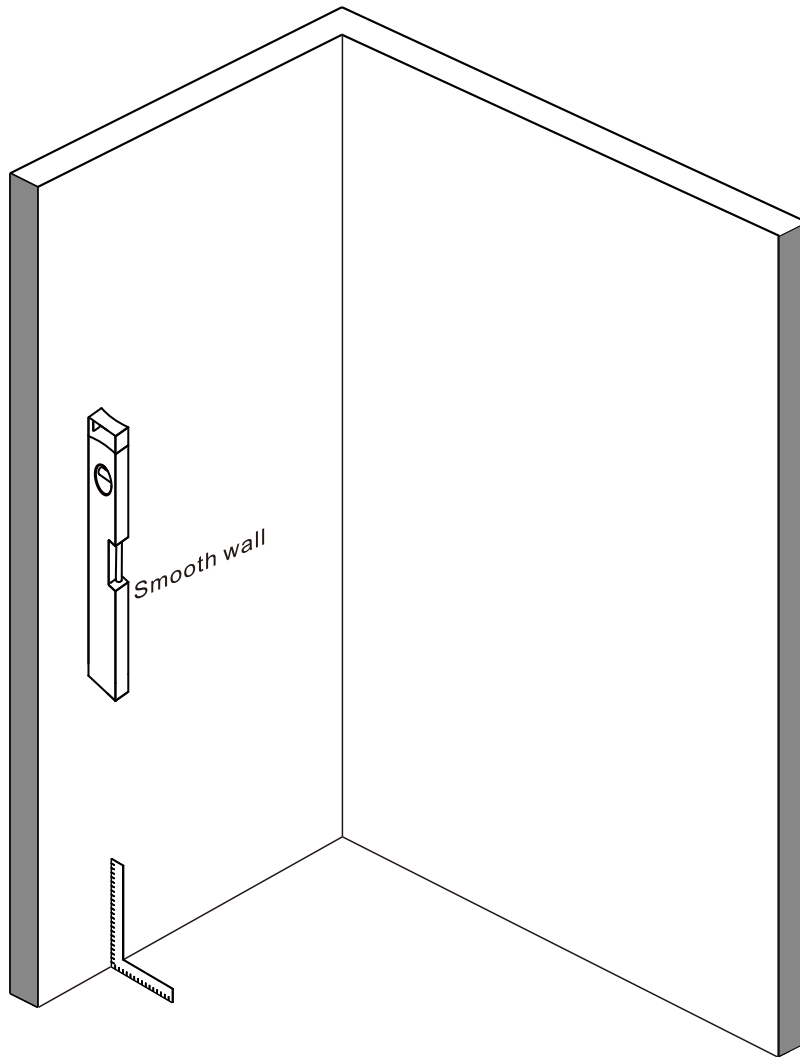


TOOLS AND MATERIALS REQUIRED

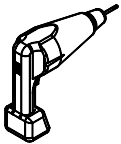


PERCEUSE
DRILL




VIS
SCREWS



TOURNEVIS
SCREWDR




NIVEAU
LEVEL




COUTEAU DE PRECISION
PRECISION KNIFE



SILICONE
SILICONE



FORETS: 1/8", 3/16" ET 1/4"
*FORET À MAÇONNERIE
DRILL BITS: 1/8", 3/16" ET 1/4"
*MASONRY DRILL BIT

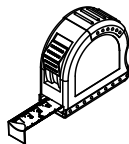


RUBAN À MESURER
MEASURING TAPE



ÉQUERRE
SET SQUARE




CRAYON
PENCIL





MAILLET
MALLET

A 01


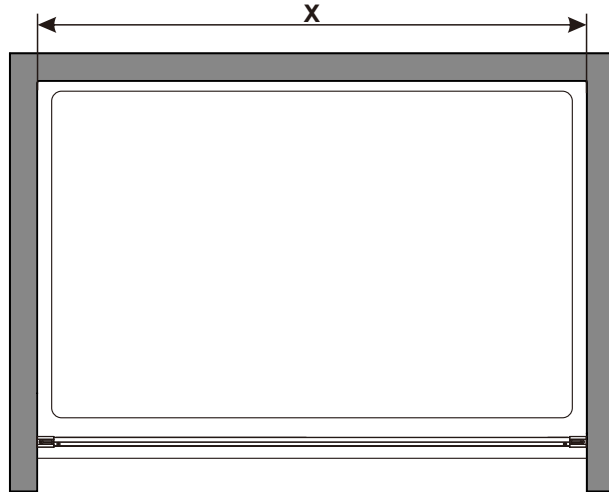


SIZE	X,mm
800X1900	770~810
900X1900	870~910








A 02

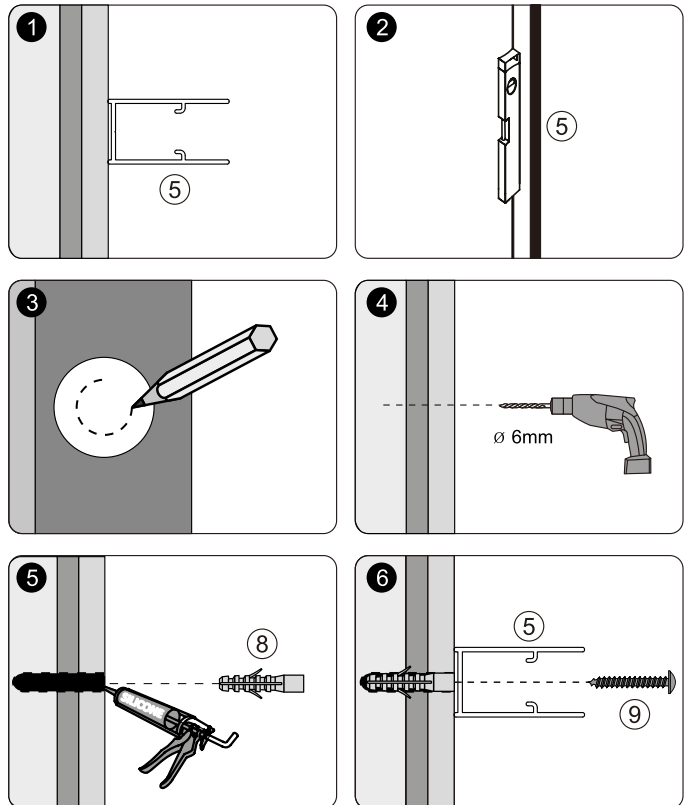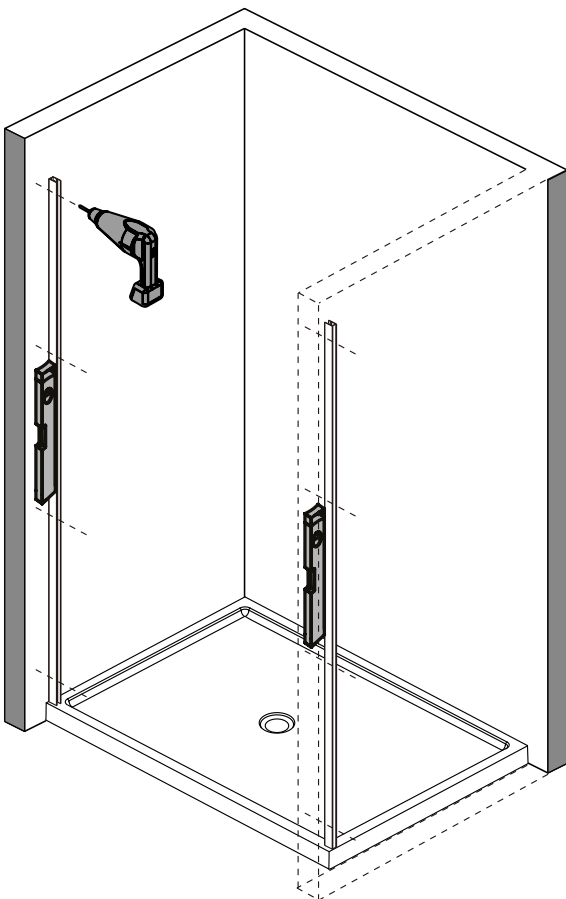


A 03

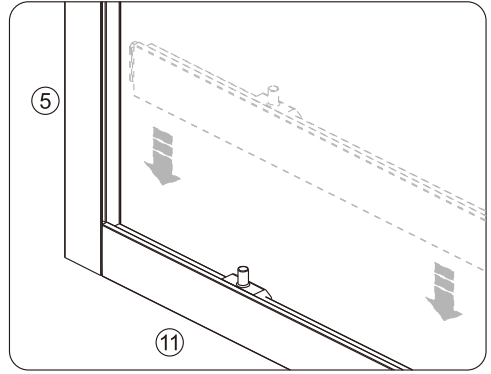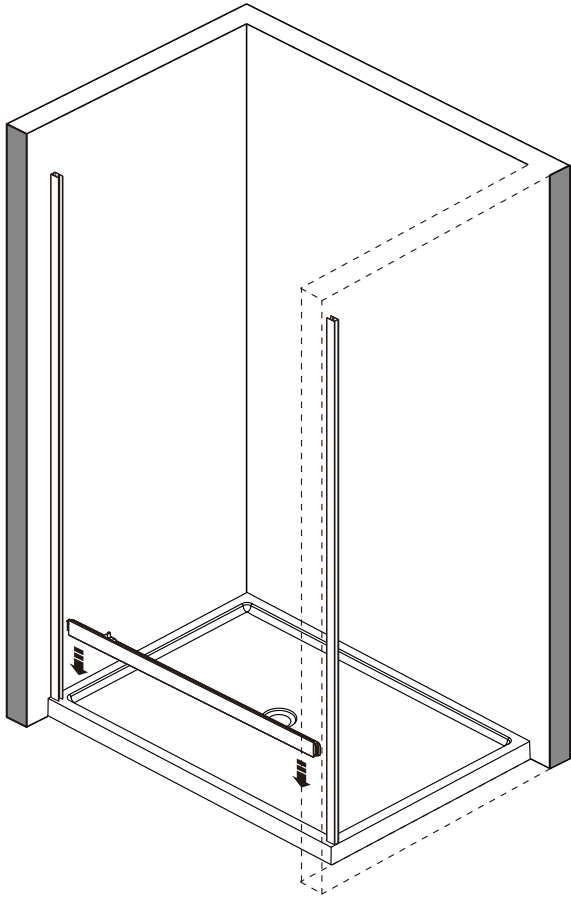


A 04

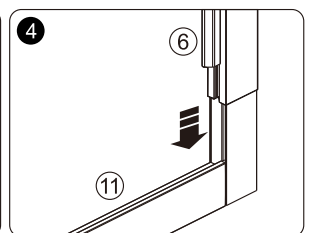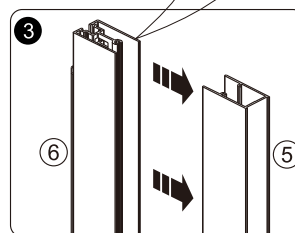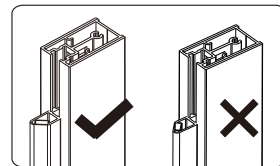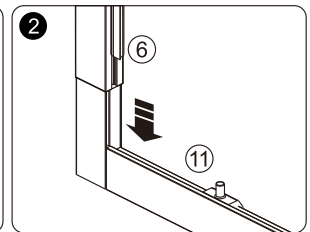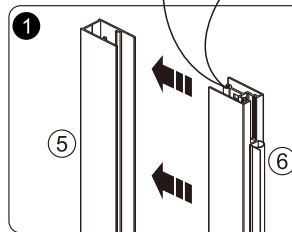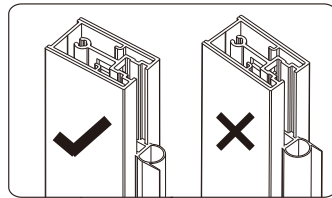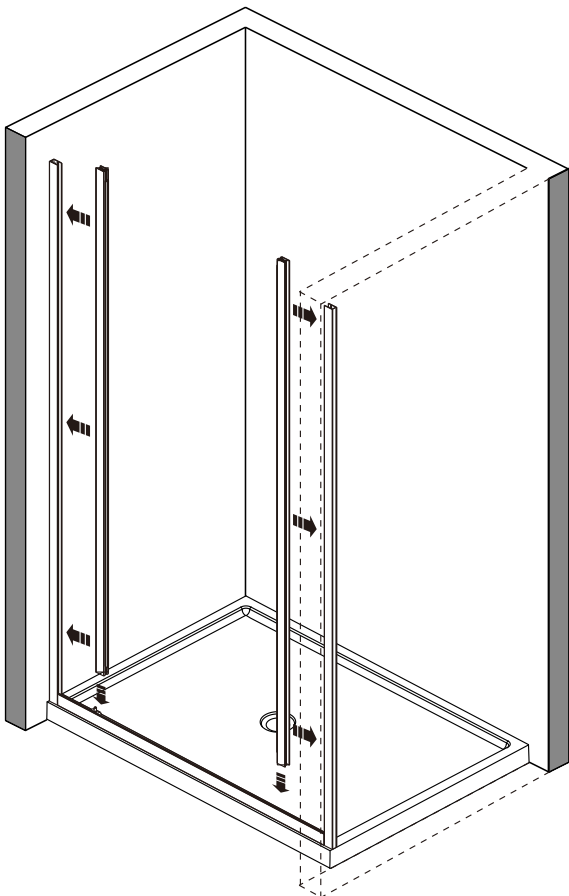





A 05

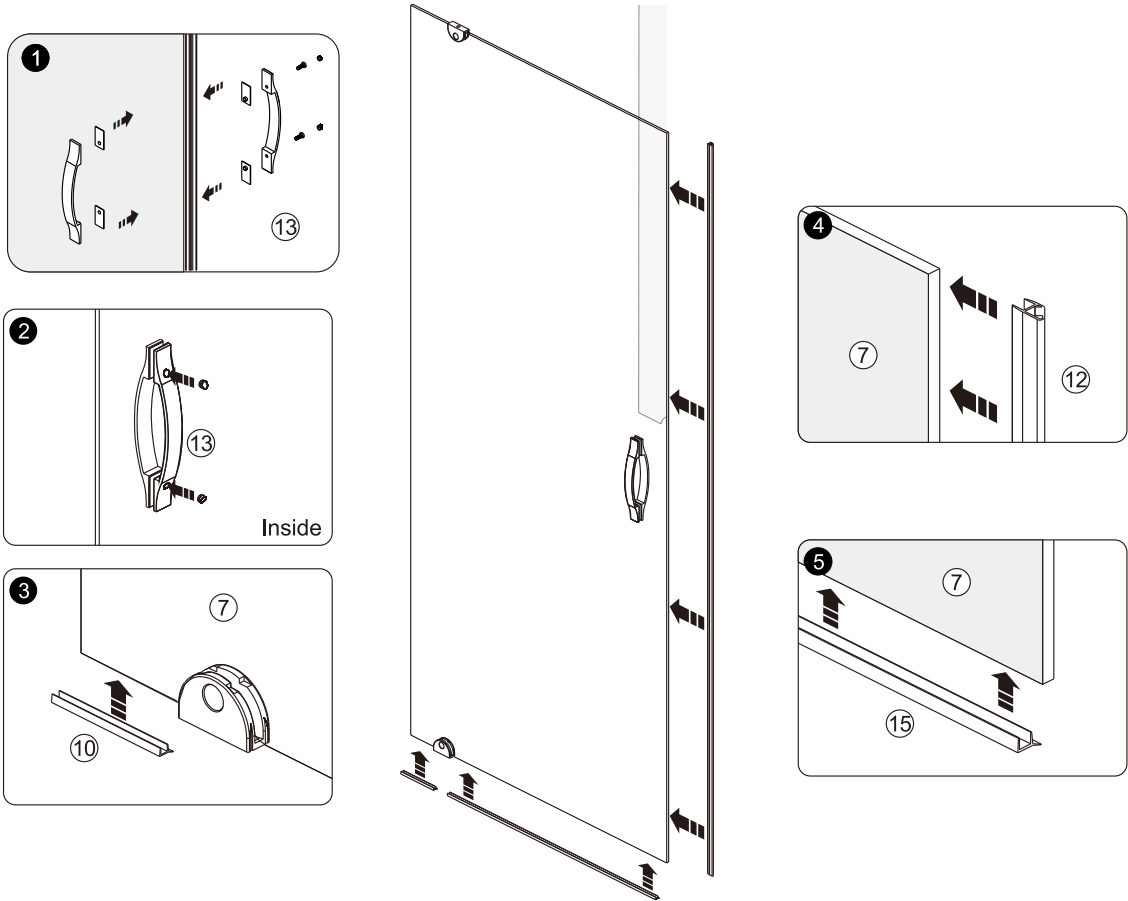








A 06

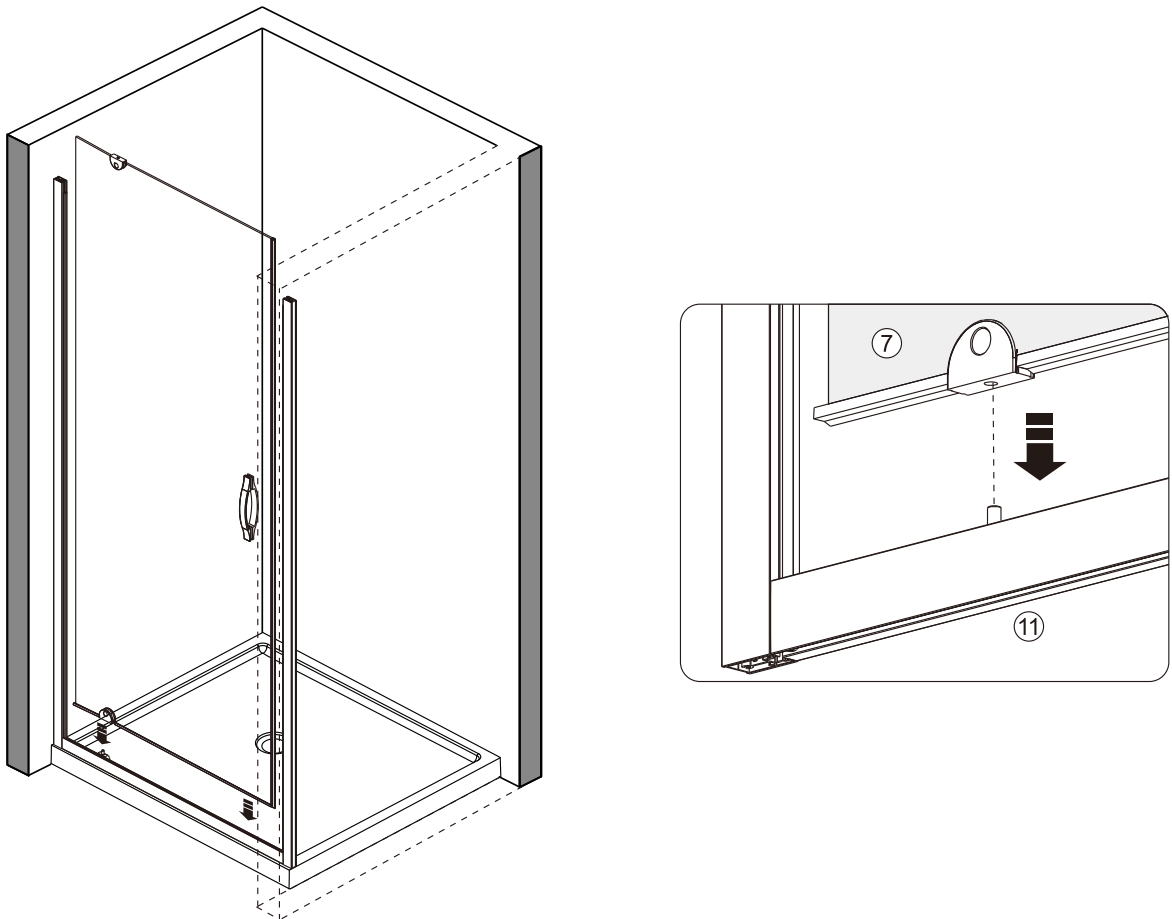





A 07

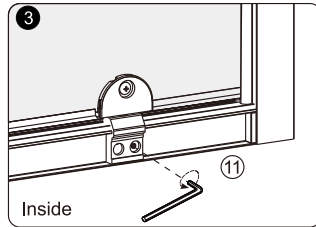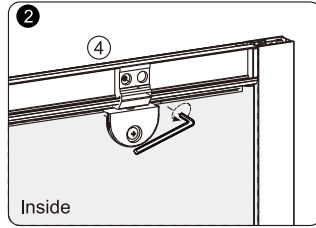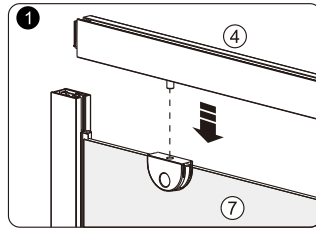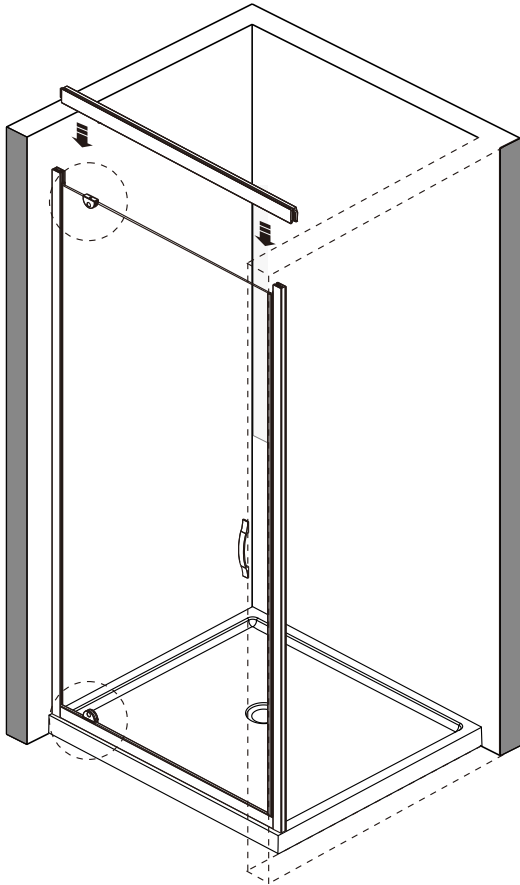

A 08

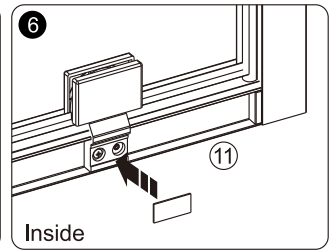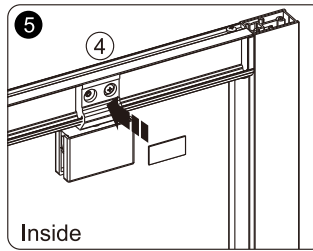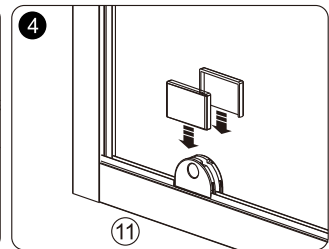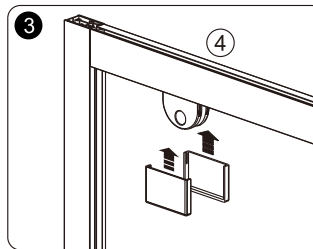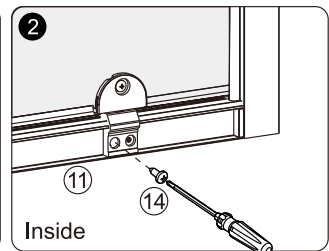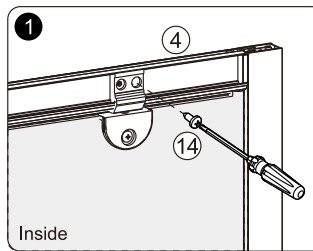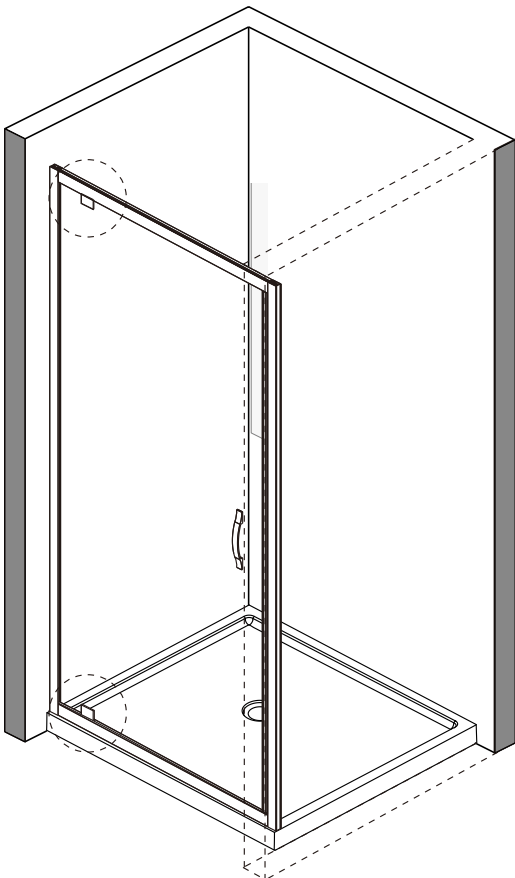

A 09

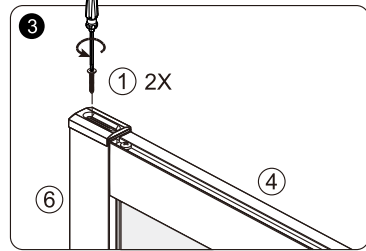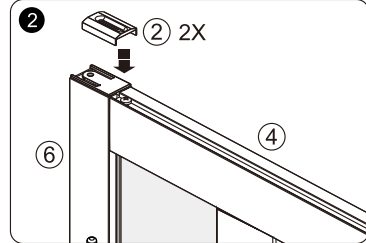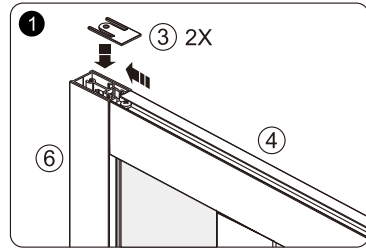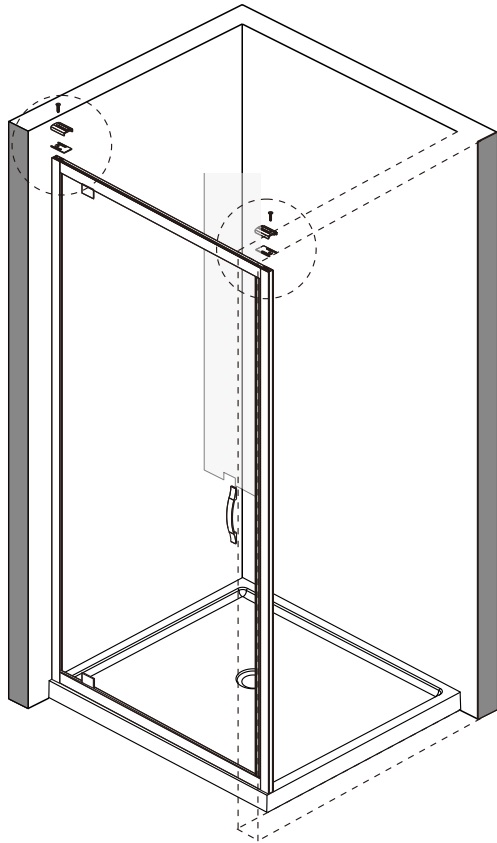

A 10

